
 
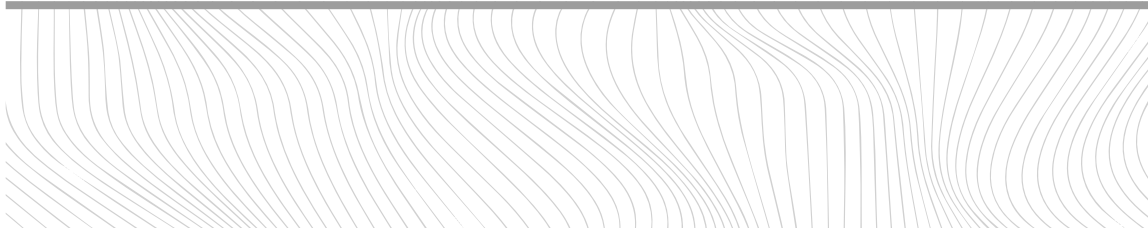 


User manual

Food chopper

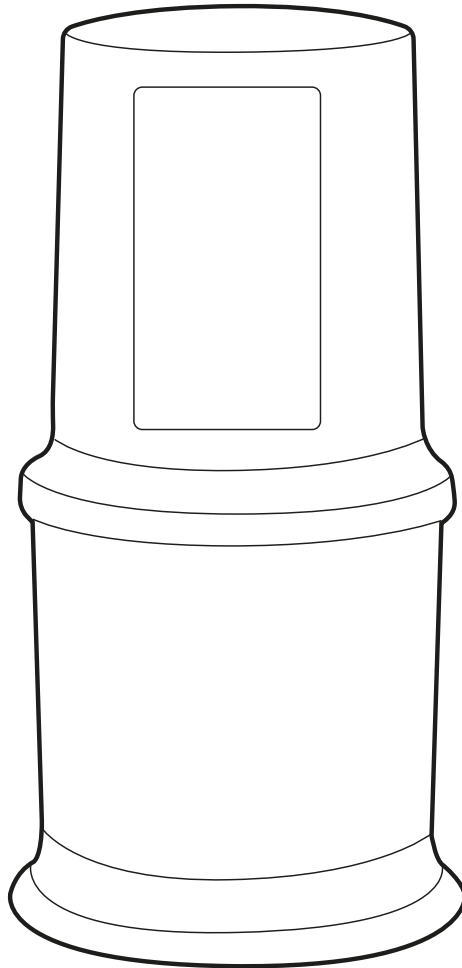

Description of parts

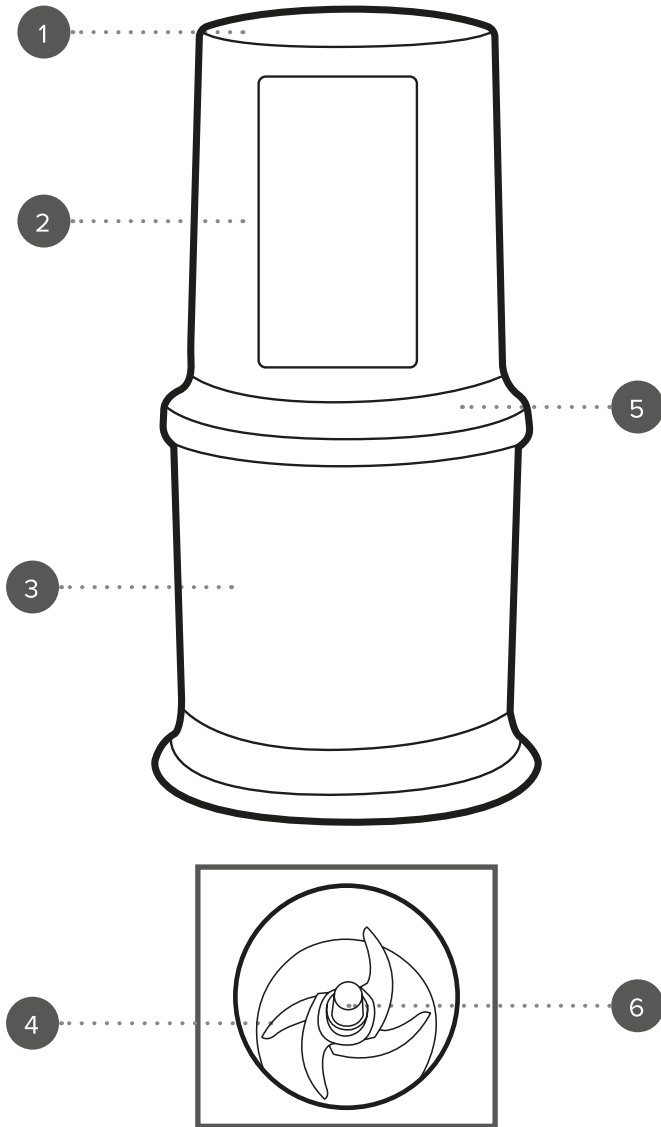

1. On/Off switch
2. Food chopper main unit
3. Chopping bowl

4. Chopper blades
5. Lid
6. Pin

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Children under 8 may not use the appliance.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the appliance away from heat emitting appliances.
- Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.
- Do not touch any moving parts on this appliance during use, as this could cause injury.
- Do not immerse the appliance in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not use broken or loose cutting or rotating blades.
- Do not overload the appliance as the mixture level may rise during blending.

- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Do not place boiling water or very hot liquid in the appliance.
- Always unplug the appliance after use and before any cleaning or user maintenance.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



WARNING: Do not touch sharp blades.

Care and maintenance

Before attempting any cleaning or maintenance, switch off and unplug the chopper from the mains power supply and allow it to cool fully.

STEP 1: Wipe the chopper main unit with a soft, damp cloth and allow to dry thoroughly.

STEP 2: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not use harsh or abrasive detergents or scourers to clean the chopper, as this could cause damage.

The food chopper and accessories are not safe for dishwasher use.



NOTE: The food chopper should be cleaned after each use.



WARNING: Handle the chopping attachment with care as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing any attachments.

Instructions for use

Before first use

Wash all of the attachments in warm, soapy water, then rinse and dry thoroughly.

Wipe the food chopper main unit with a soft, damp cloth and allow to dry thoroughly.



NOTE: When using the food chopper for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the food chopper.

Using the food chopper

All attachments must be securely fitted before use; do not attempt to remove them until the blades have stopped moving.

Roughly chop any ingredients into pieces no larger than 2 cm in diameter.

STEP 1: Align the chopper blades with the pin at the base of the chopping bowl and press into place until secure.

STEP 2: Add the food to be chopped to the chopping bowl.

STEP 3: Place the lid onto the chopping bowl and firmly press down on the lid to secure it in place.

STEP 4: Plug in and switch on the food chopper at the mains power supply.

STEP 5: Holding the chopping bowl steady with one hand, press and hold the on/off switch until the food is chopped to the required size. Release the on/off switch and wait for the blades to stop rotating before removing the chopping bowl lid.

STEP 6: Additional food may be added to the chopped ingredients by removing the chopping bowl lid, adding the ingredients, replacing the lid and repeating the chopping process.

STEP 7: To remove the chopping bowl from the food chopper main unit, remove the lid and carefully remove the chopping attachment without touching the blade itself.



CAUTION: Switch off and unplug the food chopper from the mains power supply before adding or removing food from the chopping bowl.

WARNING: Do not operate the food chopper without food, as this can cause damage. Max. operation time is 15 seconds. Allow to cool for 1 minute before using the food chopper again.

Troubleshooting

Problem	Possible cause	Solution
The food chopper will not operate.	The food chopper is not connected to the mains power supply.	Plug in and switch on the food chopper at the mains power supply.
	The food chopper is not correctly assembled.	Check that the food chopper has been properly assembled and that the chopping bowl and lid are secured into place.
Dry ingredients are clumping together.	The chopping bowl is wet.	Dry the chopping bowl thoroughly before adding ingredients.
There are large chunks of ingredients after chopping.	The chopping bowl has been overfilled.	Remove some of the ingredients and chop in batches.

Storage

Check that the food chopper is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the food chopper; wrap it loosely to avoid causing damage.

Specifications

Product code: EK5879

Input: 220–240 V ~ 50–60 Hz

Output: 200–400 W



Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin DO2 X658. **ROI.**

MADE IN CHINA.

CD150923/MD000000/V1