




## ASSEMBLY INSTRUCTION

# SAVONA 4 PIECE RATTAN GARDEN SOFA SET


**PLU : 154886**

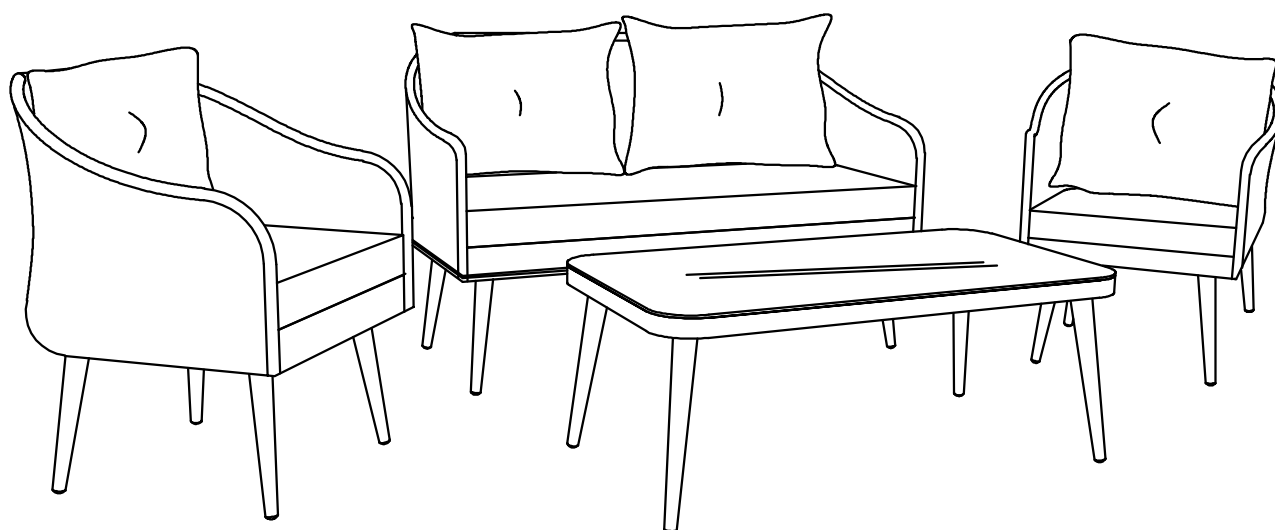


# PART LIST:




(A) x12




(B) x4

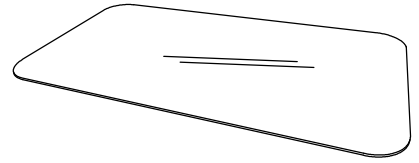


(C) x1

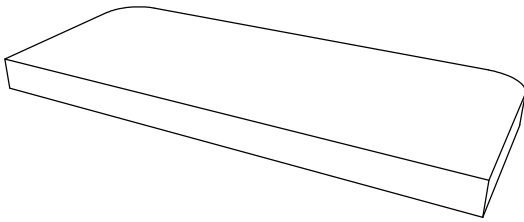


(D) x1

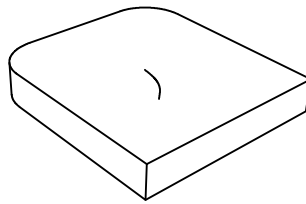


(E) x2

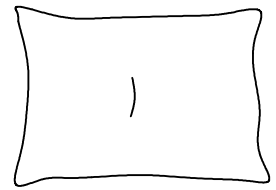


(F) x4

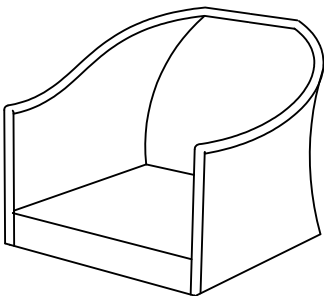

(G) x2

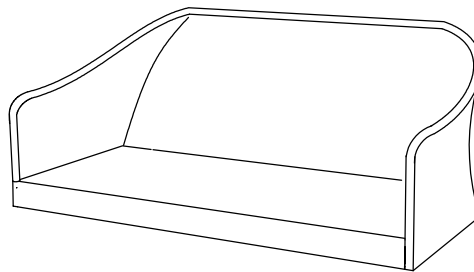


(H) x1

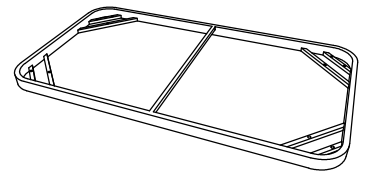

(K) x1

# HARDWARE:

①



Bolt **M6x20mm** = 60 pcs

②




Washers = 60 pcs



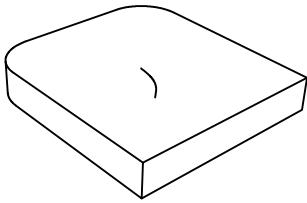
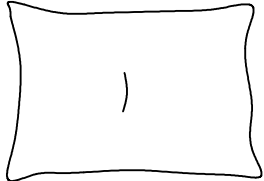
③




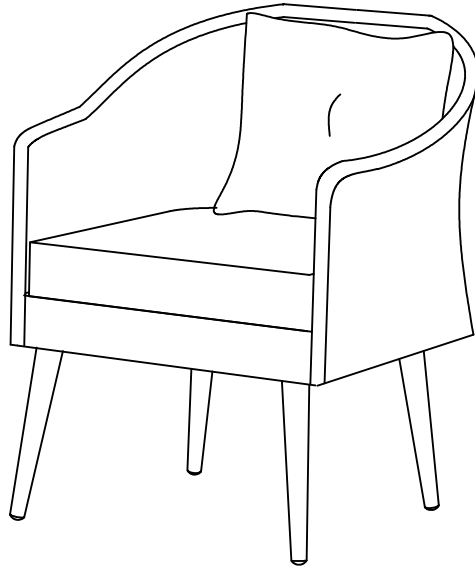

Allenkey = 2 pcs

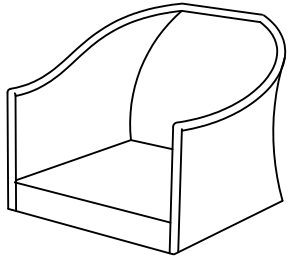



**X2**

G		1 PC
A		4 PCS
E		1 PC
F		1 PC


1	 Bolt M6x20mm	16pcs
2	 Washers	16pcs
3	 Allenkey	1 pc


1



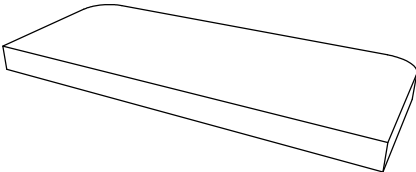
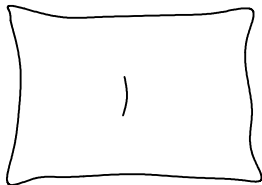
X2

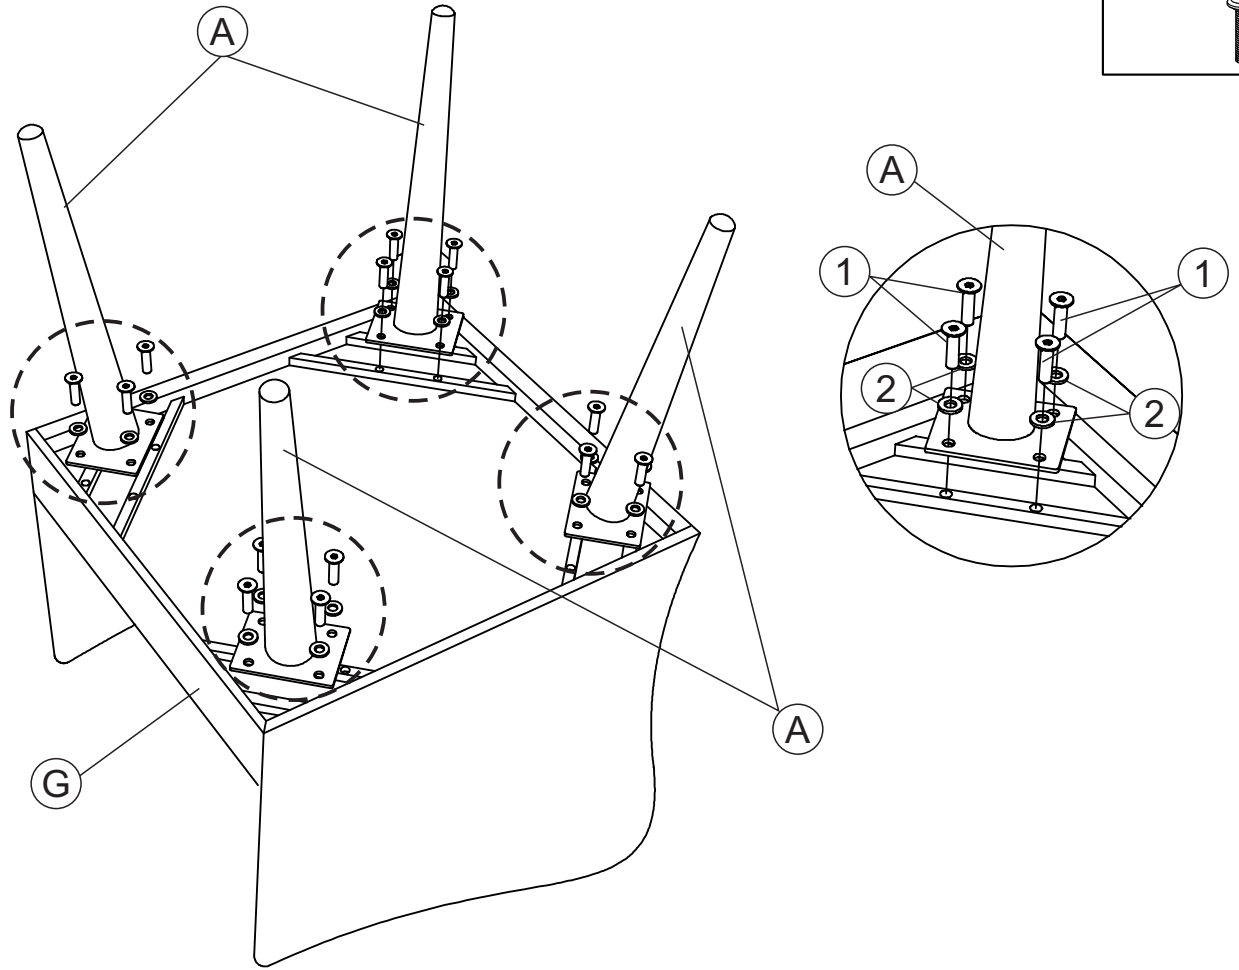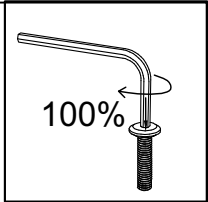




2

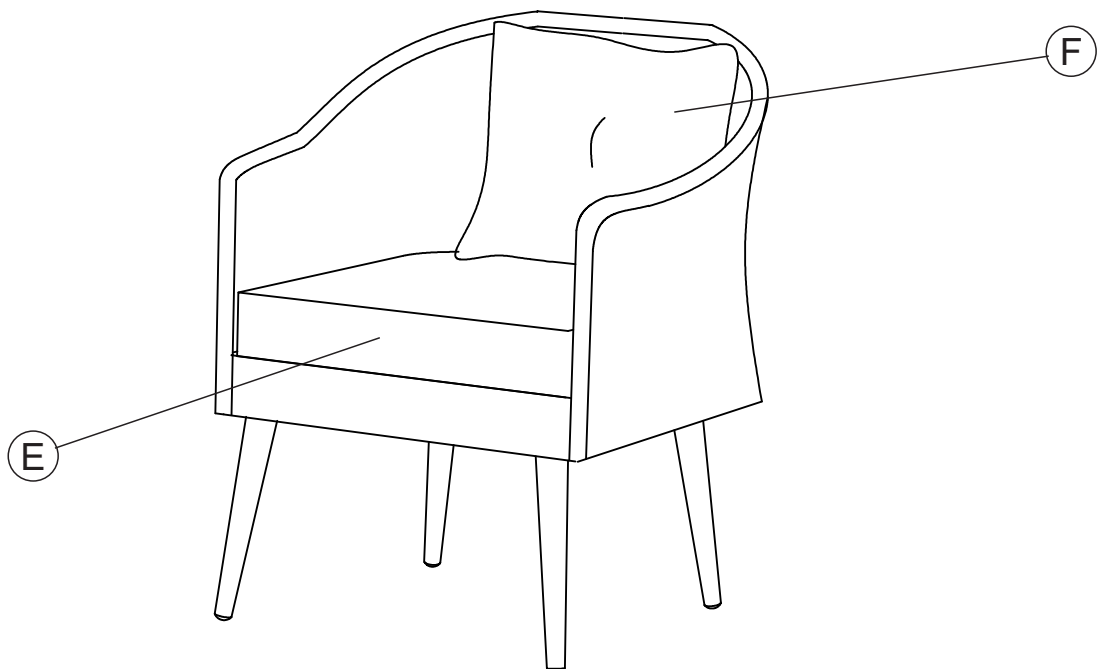


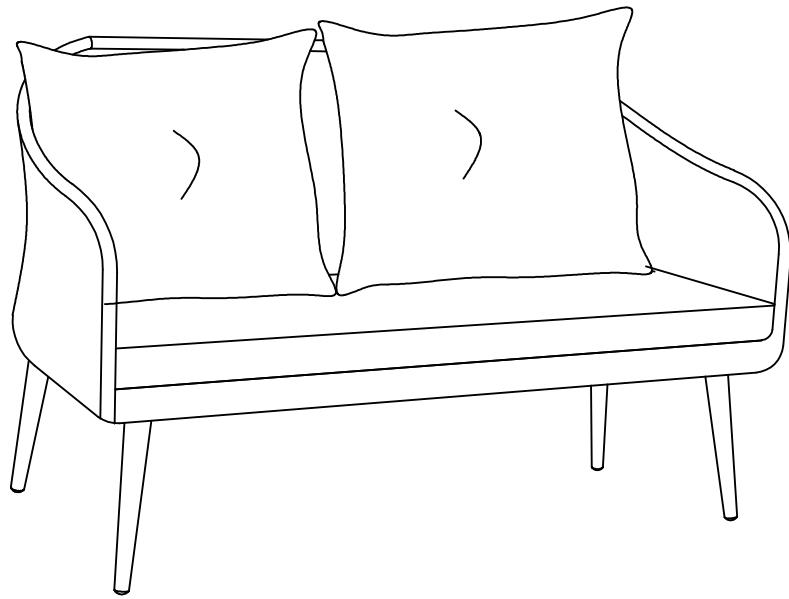

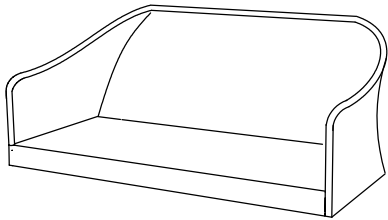
H		1 PC
A		4 PCS
D		1 PC
F		2 PCS


1	 Bolt M6x20mm	16pcs
2	 Washers	16pcs
3	 Allenkey	1 pc



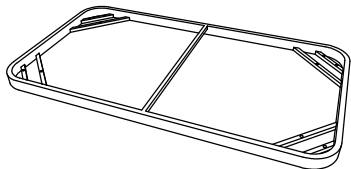
1

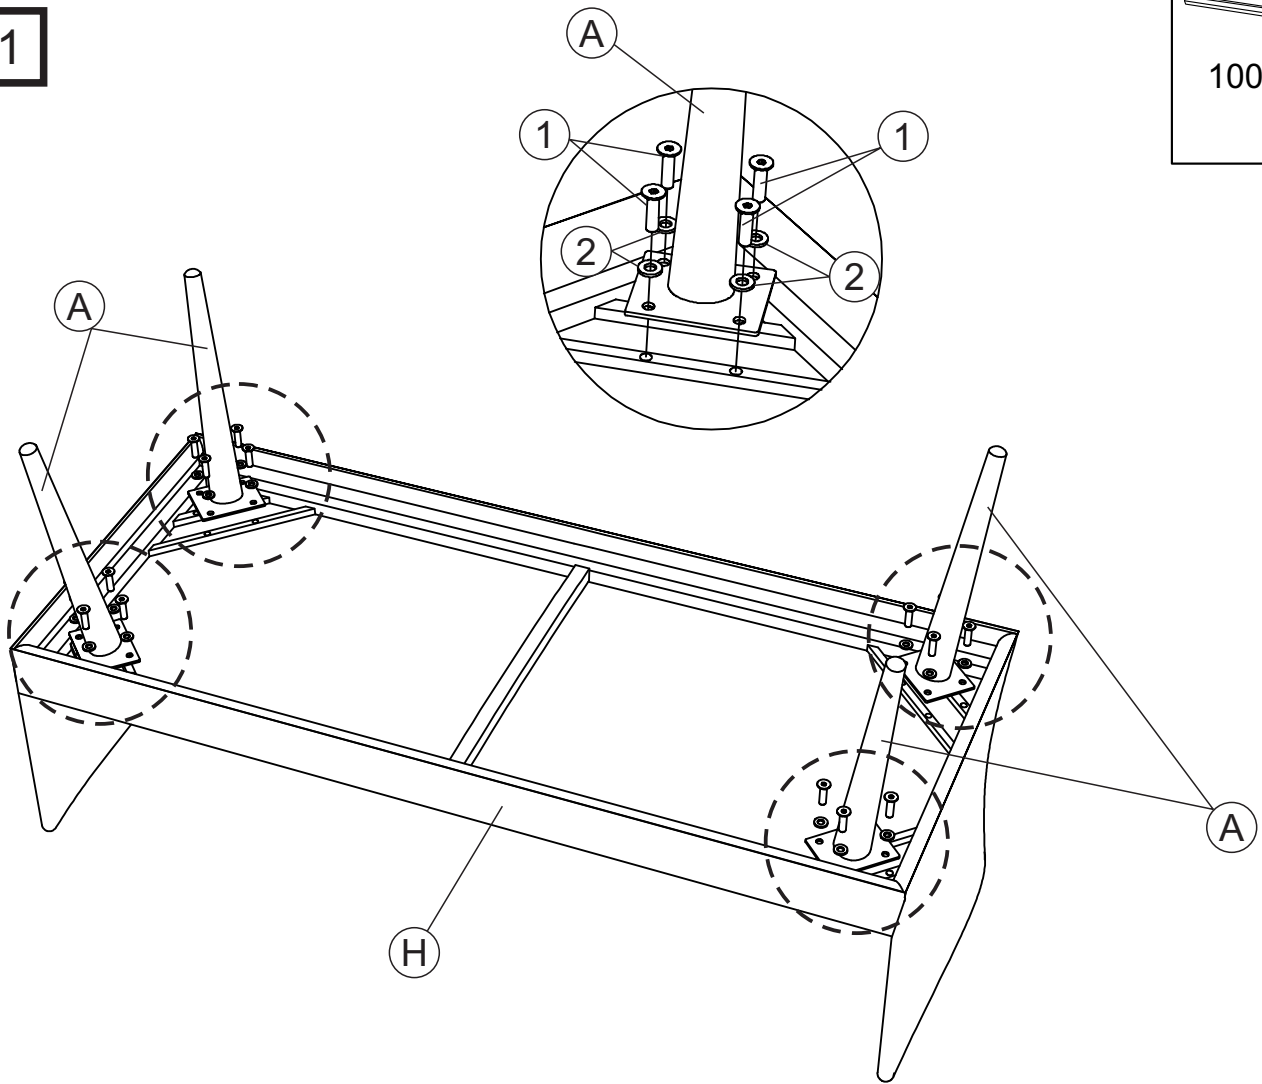


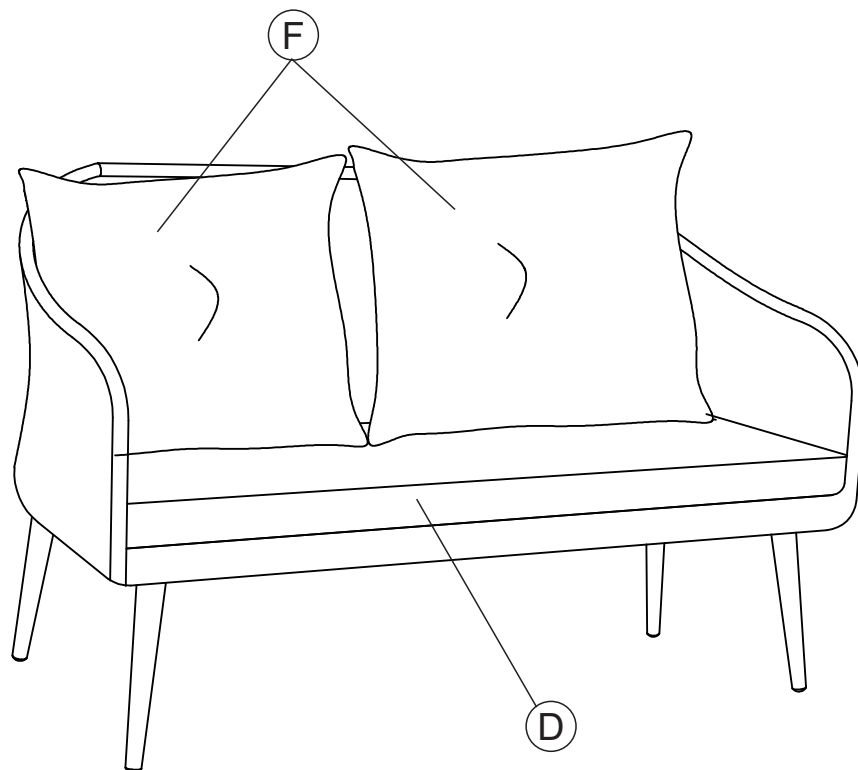

2


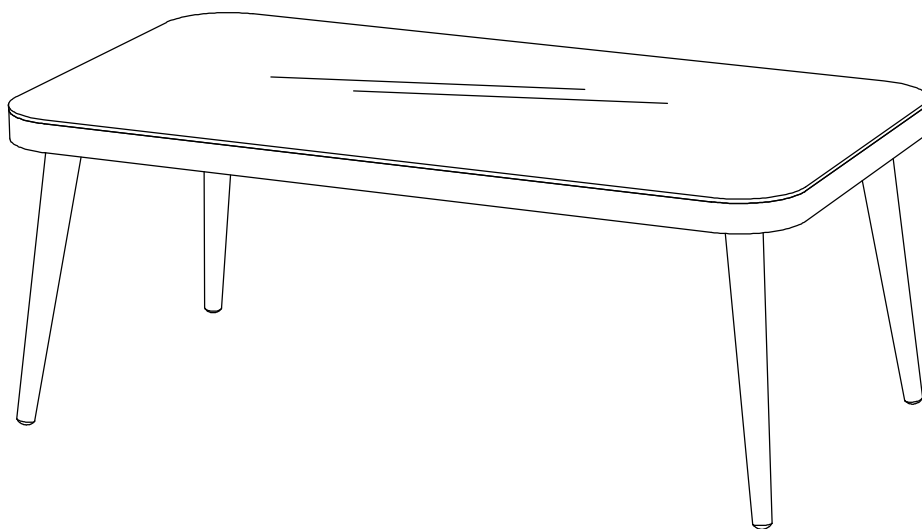




B		4 PCS
C		1 PC
K		1 PC

1	 Bolt M6x20mm	12 pcs
2	 Washers	12 pcs
3	 Allenkey	1 pc

1

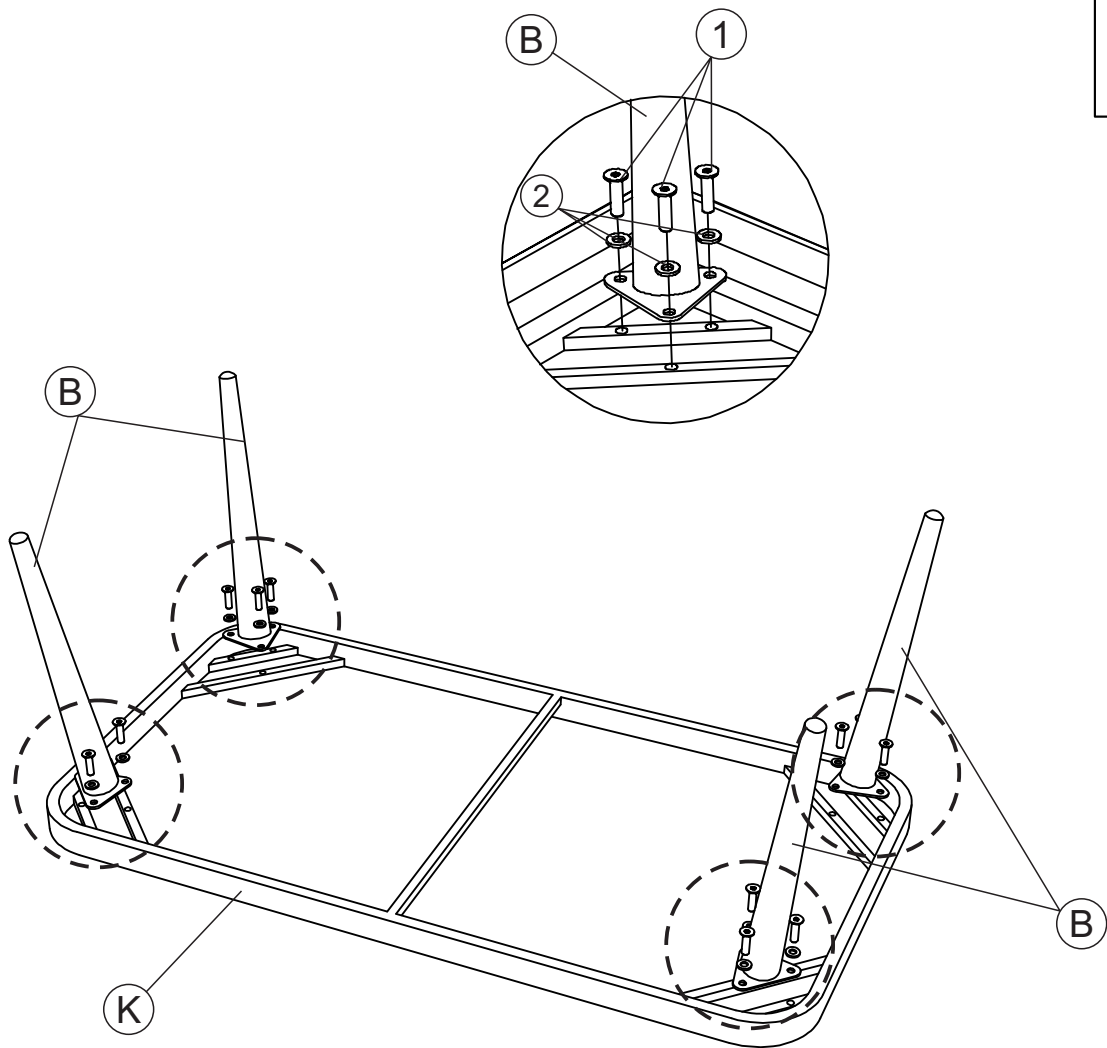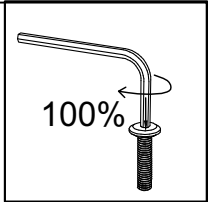

2

