


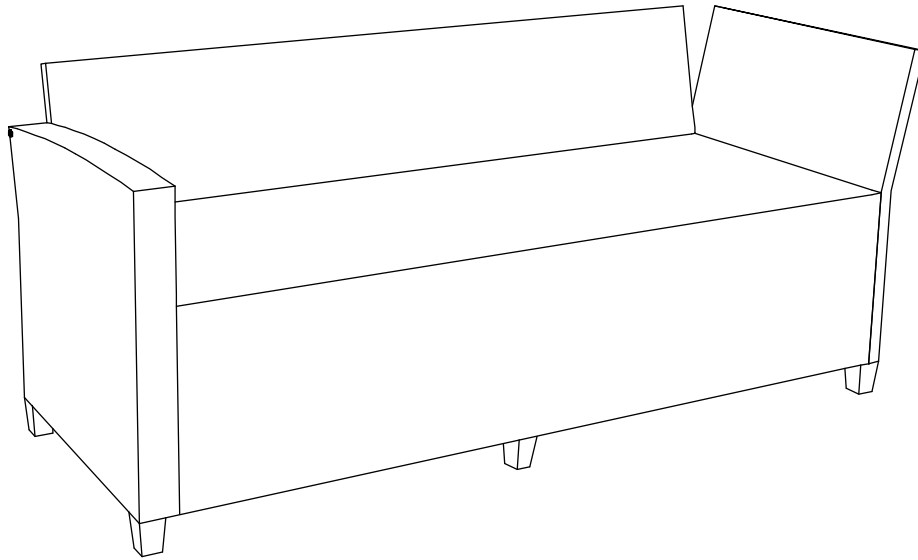
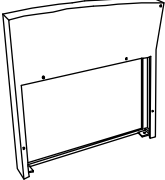


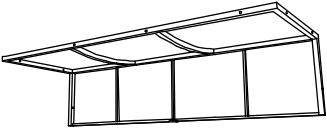

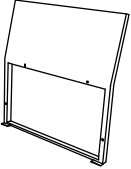

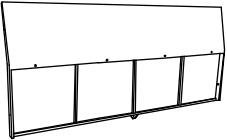




ASSEMBLY INSTRUCTION

Description: PARMA RATTAN CORNER SOFA SET
PLU number: 154892









A		1 PC
B		1 PC
C		1 PC
D		1 PC
E		1 PC
F		4 PCS

1	 M6x40 mm	8 PCS
2	 M6x35 mm	4 PCS
3	 M6x110 mm	1 PC
4	 M6x55 mm	6 PCS
5	 Ø6 x 14 mm	13 PCS
6		6 PCS
8	 Allenkey 4 x 60	1 PC



1

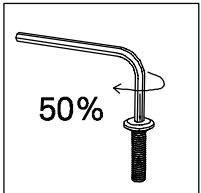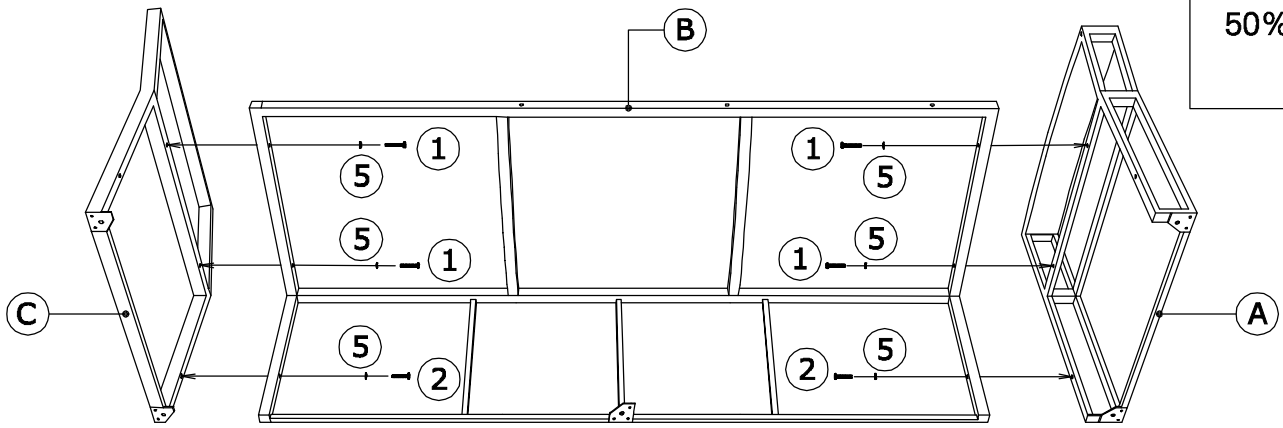







2

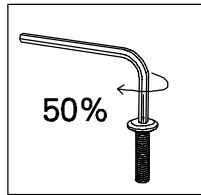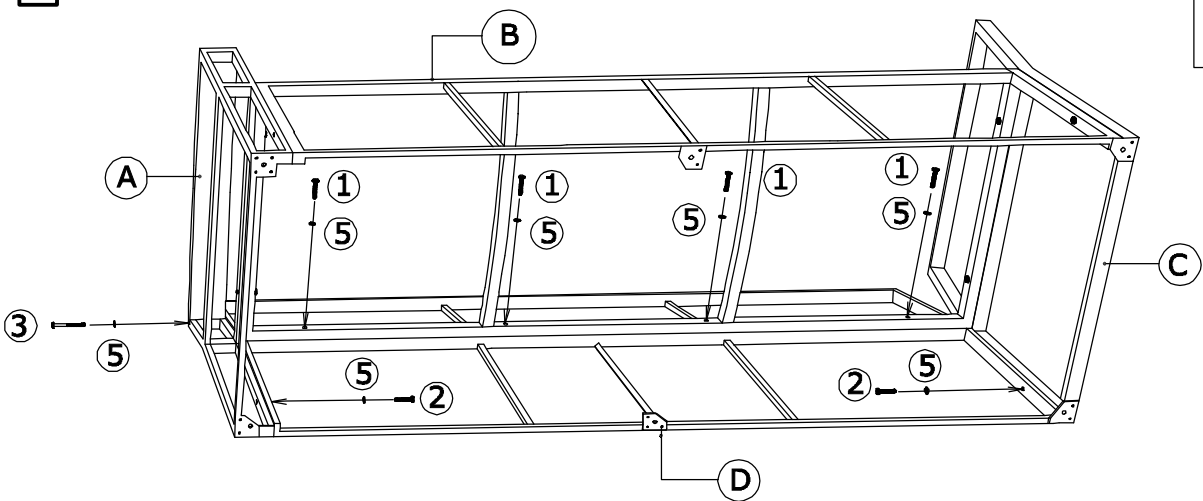

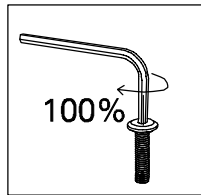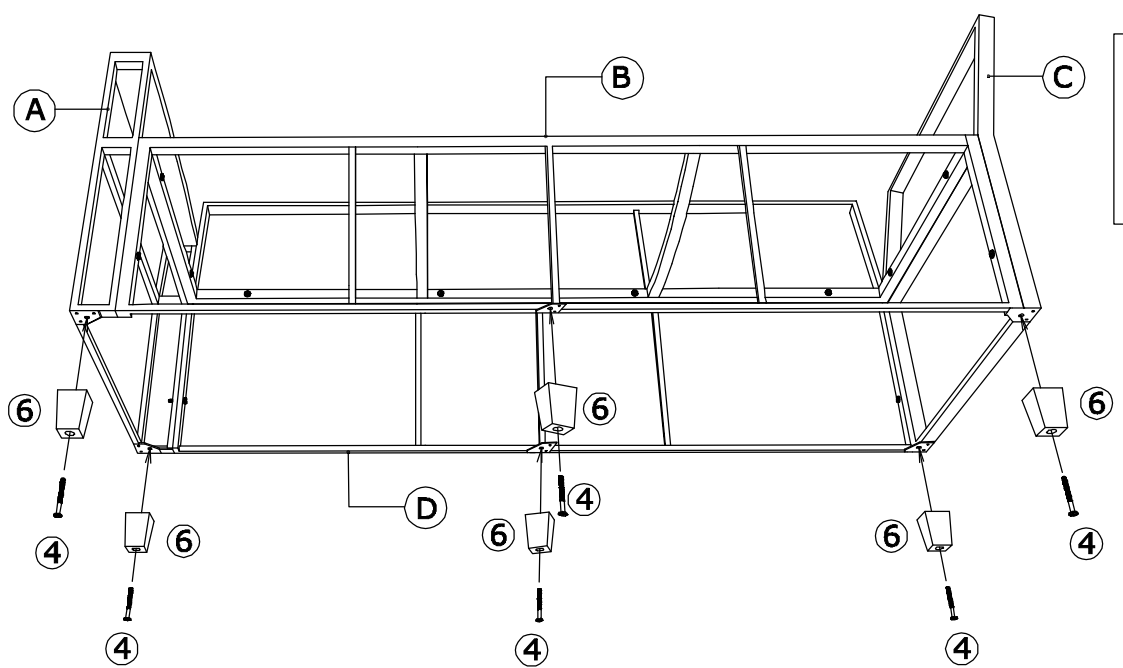







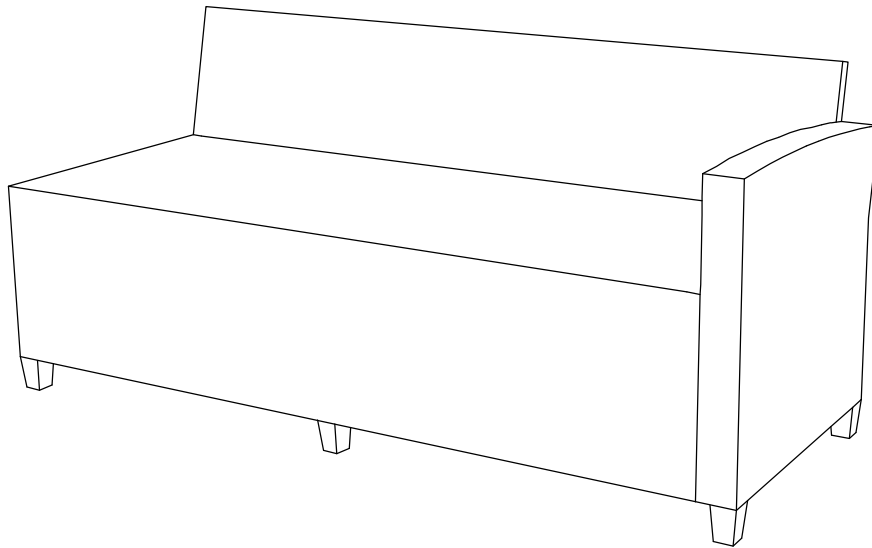3

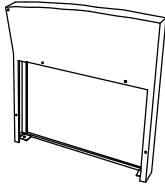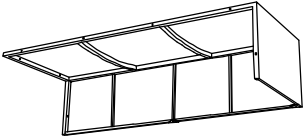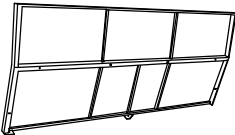







G		1 PC
H		1 PC
I		1 PC
E		1 PC
F		3 PCS

1	 M6x40 mm	6 PCS
2	 M6x35 mm	3 PCS
3	 M6x110 mm	1 PC
4	 M6x55 mm	6 PCS
5	 Ø6 x 14 mm	10 PCS
6		6 PCS
7		2 PCS
8	 Allenkey 4 x 60	1 PC



1

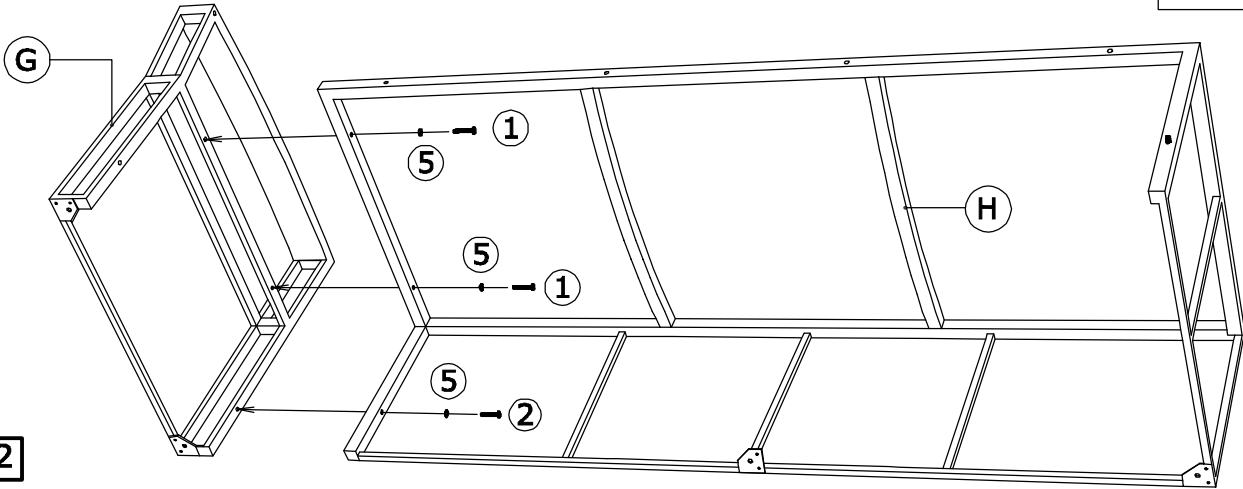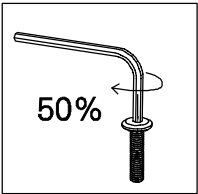


2

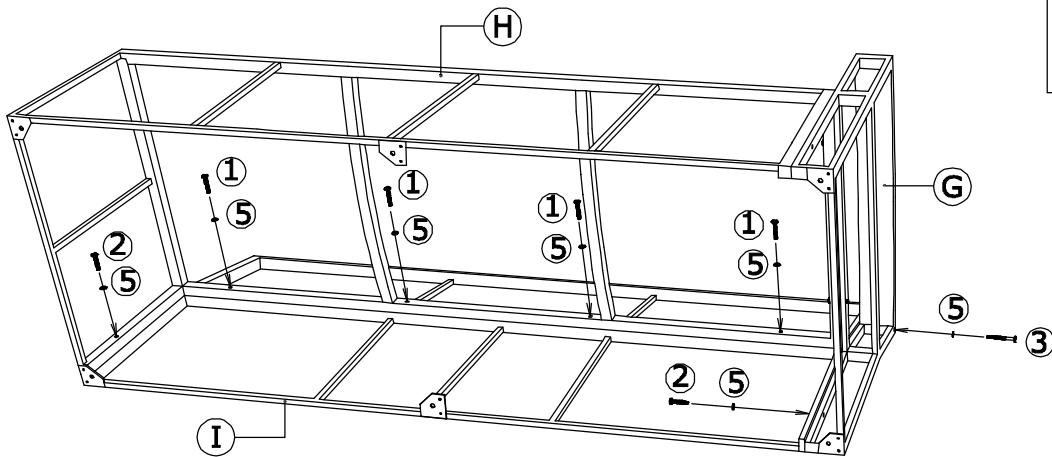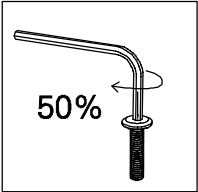


3

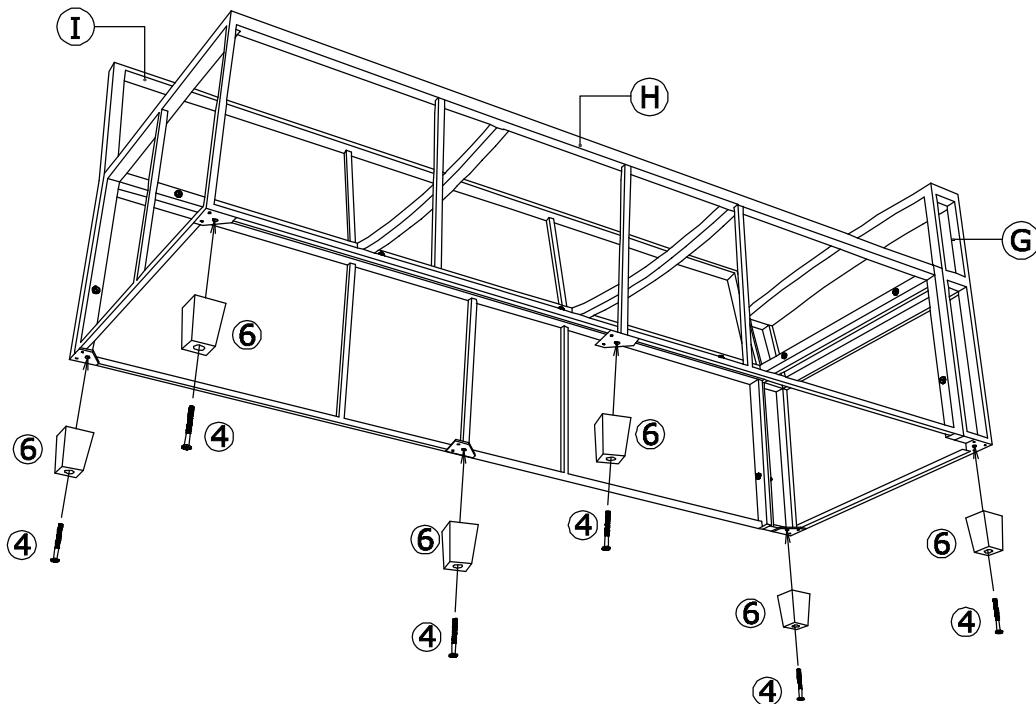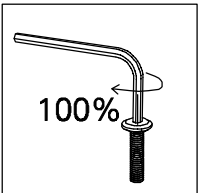




4


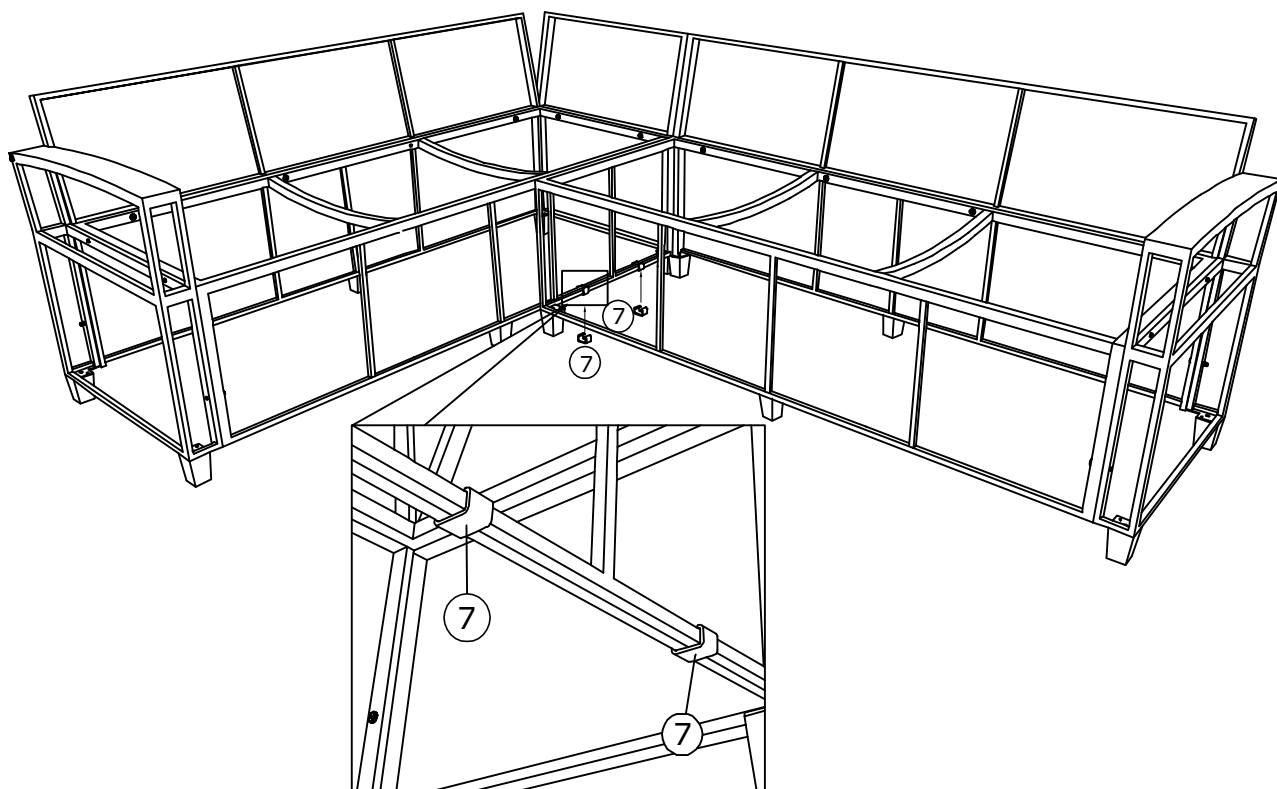



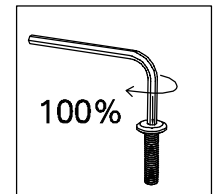
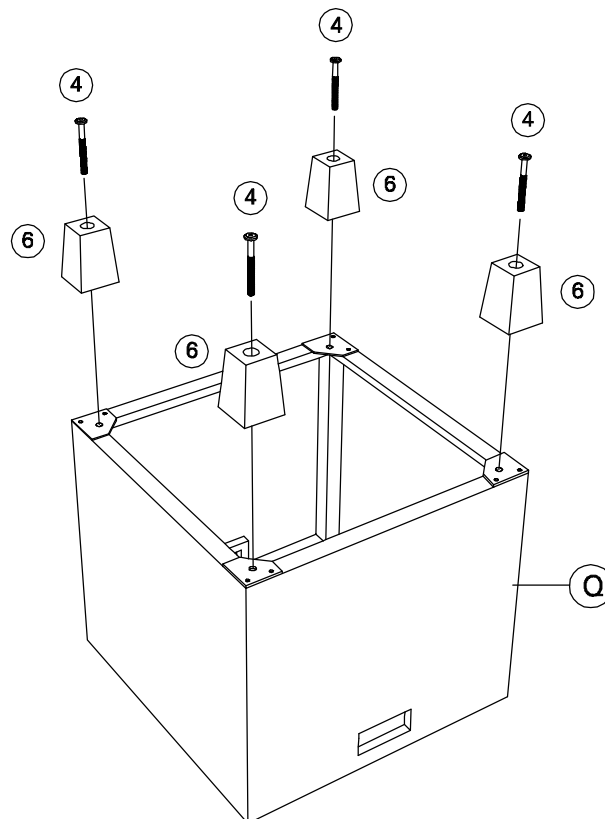
5

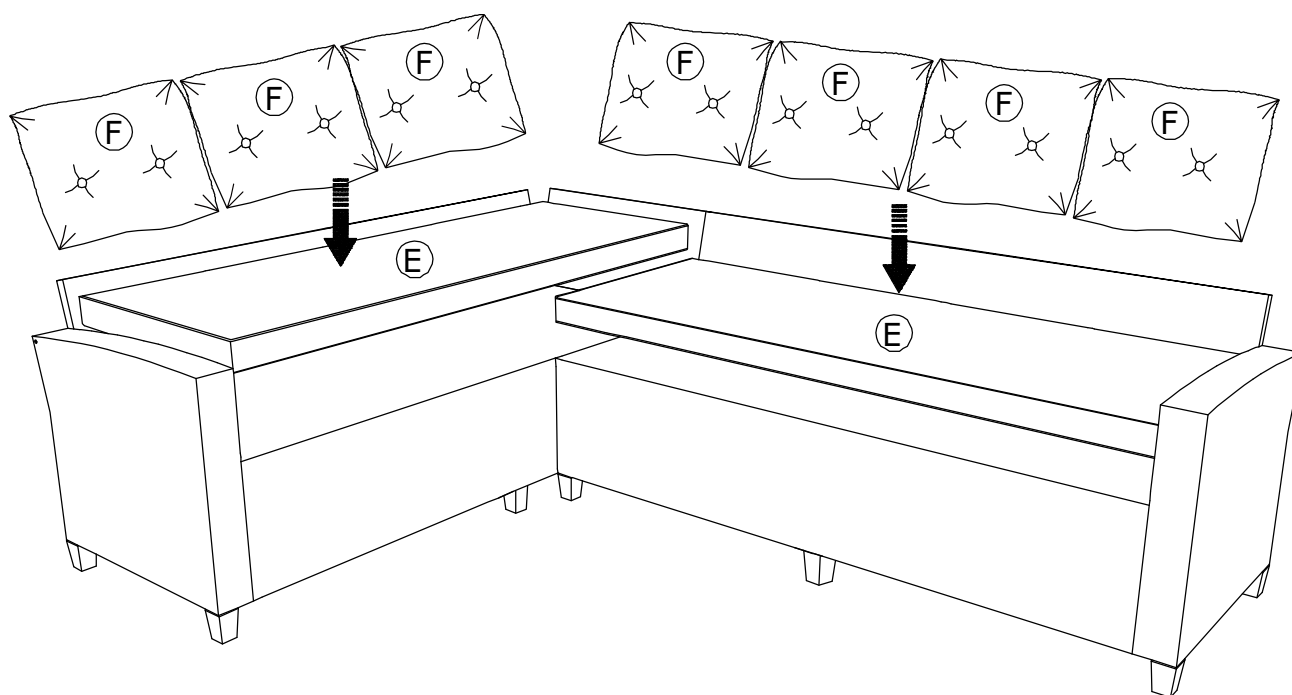


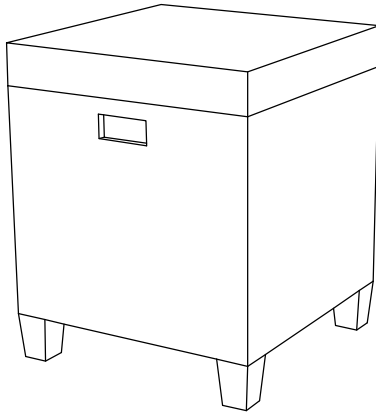


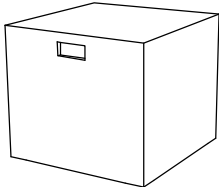





Q		1 PC x 2
T		1 PC x 2

4	 M6 x 55	4 PCS x 2
6		4 PCS x 2
8	 Alenkey 4x60	1 PC




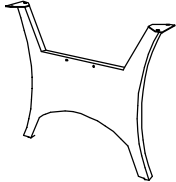




X		2 PCS
Y		1 PC
Z		1 PC

2	 M6x35 mm	4 PCS
5	 Ø6 x 14 mm	4 PCS
9	 M8x20 mm	8 PCS
10	 Ø8 x 16 mm	8 PCS
8	 Allenkey 4 x 60	1 PC

1

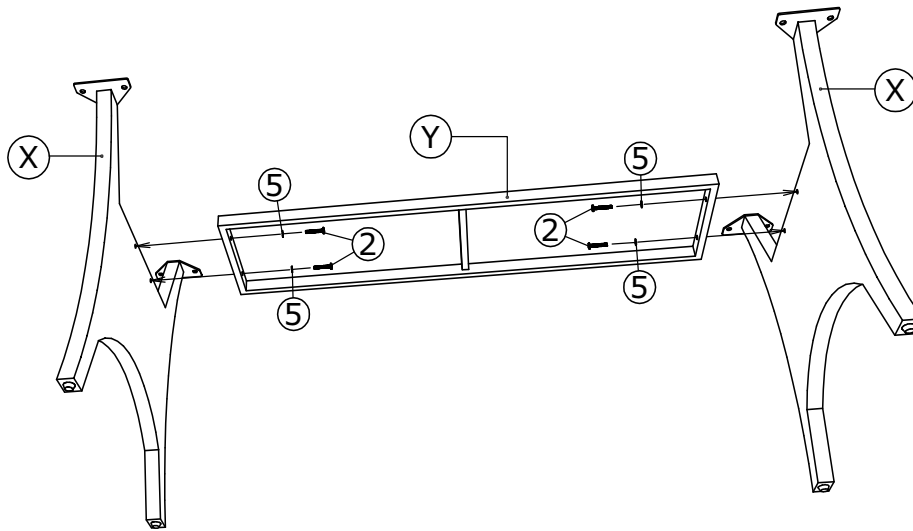

2

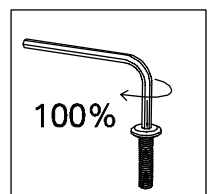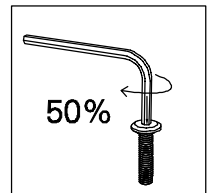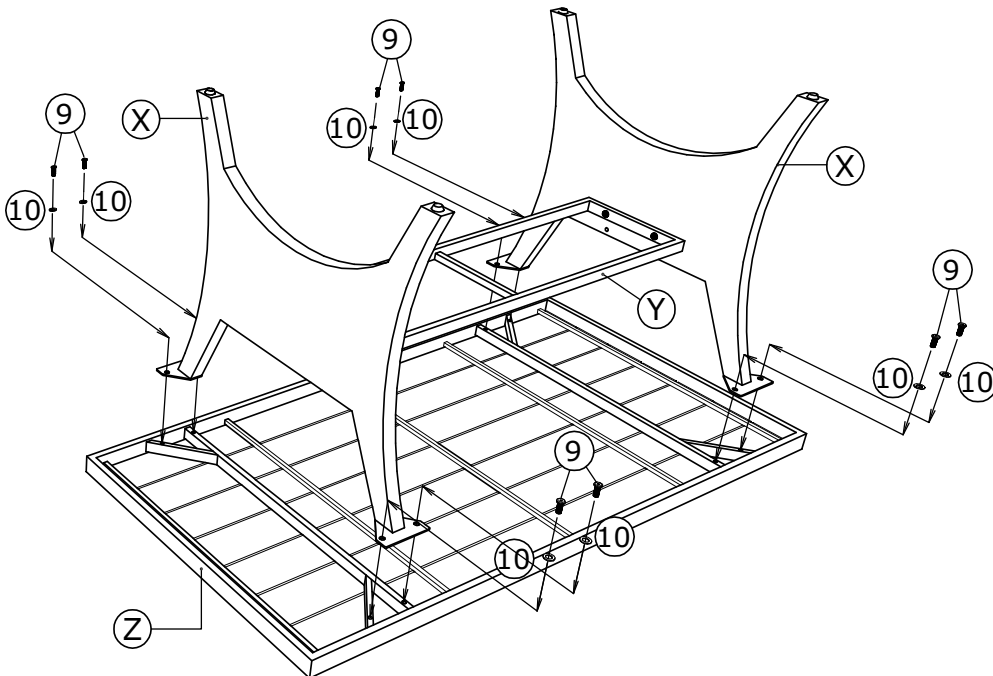

3

